

thinklogical™
The Future of Access and Control

USB EXTENDER 2.0

USB 2.0 Hi-Speed Extension System
Model USB-2

QUICK START GUIDE

STEP 1

Connect two multi-mode fiber optic cables (up to 1000 meters) between the Receiver and Transmitter Units. Be sure to connect the **TX port labeled T** to the **RX port labeled R** and the **TX port labeled R** to the **RX port labeled T**. Do not kink or pinch the cable and be sure to keep all bend radii to no less than 3 inches.

STEP 2

Connect the supplied **AC Power Adapter** (PWR-000022-R) to the Receiver and plug it into a standard AC source.

STEP 3

Connect up to four USB 2.0 devices to the **USB Extender Receiver's type-A ports** at your destination location.

STEP 4


Connect the supplied **AC Power Adapter** (PWR-000022-R) to the Transmitter and plug it into a standard AC source.

STEP 5

Using the supplied 6 ft. USB cable (CBL000015-006FR), connect the **USB-A** connector to a **USB port on the back of the source CPU** and the **USB-B** connector to the **Transmitter's type-B port**. Ensure that the computer is turned on and that all system functions are operating properly.

thinklogical™

PHONE: 1-800-291-3211
WEBSITE: www.thinklogical.com
EMAIL: support@thinklogical.com

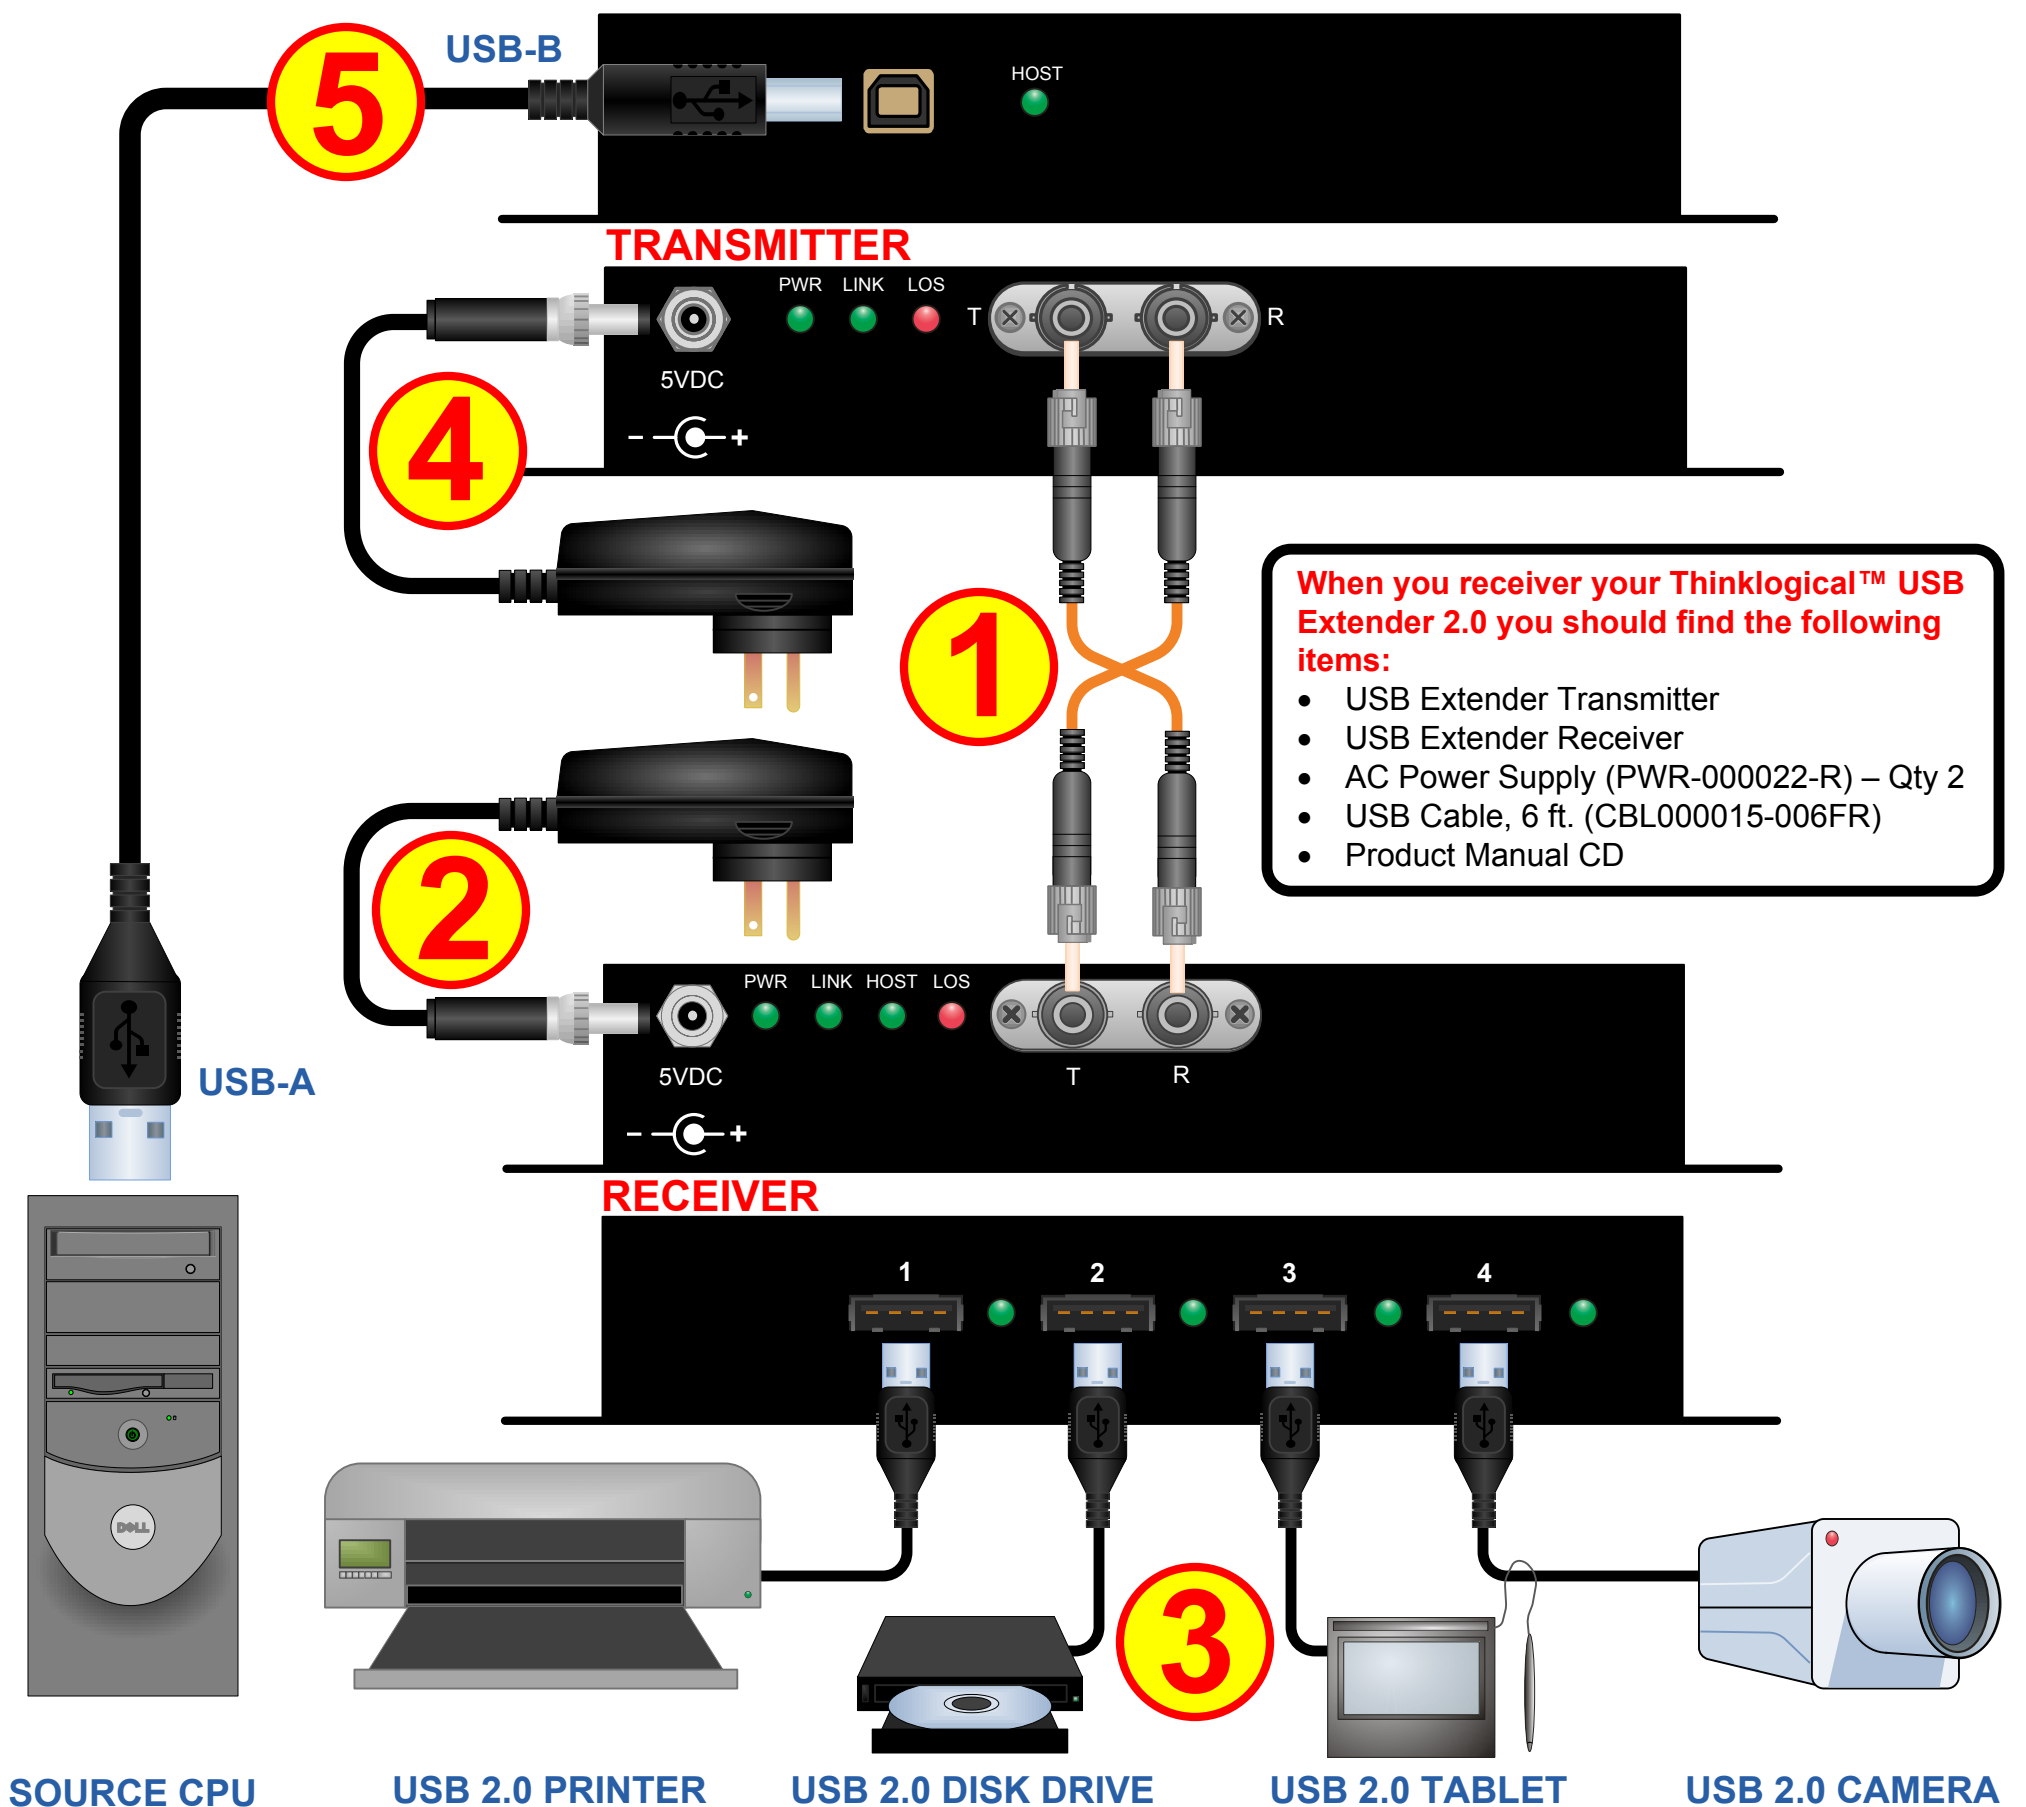

When you receive your Thinklogical™ USB Extender 2.0 you should find the following items:

- USB Extender Transmitter
- USB Extender Receiver
- AC Power Supply (PWR-000022-R) – Qty 2
- USB Cable, 6 ft. (CBL000015-006FR)
- Product Manual CD