

HDX576 router QUICK-START GUIDE

As used with the SDIXtreme^{3G+} and the Image EvolutionX3

The HDX576 Router Critical Hardware Alarms: (Located at the top, left rear of the unit.)

1	POWER SUPPLY 1 (LEFT): Fan failure, temperature spikes, DC voltage and/or current out of range, AC power input interruption or module removed
2	POWER SUPPLY 2: Fan failure, temperature spikes, DC voltage and/or current out of range, AC power input interruption or module removed
3	POWER SUPPLY 3: Fan failure, temperature spikes, DC voltage and/or current out of range, AC power input interruption or module removed
4	POWER SUPPLY 4 (RIGHT): Fan failure, temperature spikes, DC voltage and/or current out of range, AC power input interruption or module removed
5	FANS: Individual fan monitoring
6	TEMPERATURE WARNING: Chassis over temperature, multiple sensors
7	TEMPERATURE SHUTDOWN: Chassis over temperature causing shutdown
8	CPU: Card failure (Only with a redundant card)
9	INPUT/OUTPUT CARDS: SFP+ failure, laser output fault
10	ANY OF THE ABOVE
11	COMMON
12	GROUND

